

SAFETY AWARENESS

Whenever you see the symbols shown below, heed their instructions! Always follow safe operating and maintenance practices.

WARNING

This warning symbol identifies special instructions or procedures which, if not correctly followed, could result in personal injury, or loss of life.

CAUTION

This caution symbol identifies special instructions or procedures which, if not strictly observed, could result in damage to, or destruction of equipment.

NOTE

- *This note symbol indicates points of particular interest for more efficient and convenient operation.*

READ THIS FIRST

For your safety, read this Owner's Manual and understand it thoroughly before operating this ENGINE.

WARNING

DO NOT run the engine in a closed area. Exhaust gas contains carbon monoxide, an odorless and deadly poison.

Gasoline is extremely flammable and can be explosive under certain condition.

Stop engine and allow the engine to cool before refueling.

DO NOT smoke. Make sure area is well ventilated and free from any source of flame or sparks including the pilot light of any appliance while refueling, servicing fuel system, draining gasoline and/or adjusting fuel system.

DO NOT fill the tank so the fuel level rises into the filler neck or level surface of level gauge. If the tank is overfilled, heat may cause the fuel to expand and overflow through the vents in the tank cap.

Wipe off any spilled gasoline immediately.

To prevent fire hazard:

Keep the engine at least 1 m (3.3 ft) away from buildings, obstructions and other burnable objects.

DO NOT place flammable objects close to the engine.

DO NOT expose combustible materials to the engine exhaust.

DO NOT use the engine on any forest covered, bush covered or glass covered unimproved land unless spark arrester is installed on the muffler.

To avoid getting an electric shock, DO NOT touch spark plugs, plug caps or spark plug leads during engine running.

To avoid a serious burn, DO NOT touch a hot engine or muffler. The engine becomes hot during operation. Before you service or remove parts, stop engine and allow the engine to cool.

DO NOT place hands or feet near moving or rotating parts. Place a protective cover over pulley, V belt or coupling.

DO NOT run engine at excessive speeds. This may result in injury.

Always remove the spark plug caps from spark plugs when servicing the engine to prevent accidental starting.

Read warning labels which are on the engine and understand them. If any label is missing, damaged, or worn get a replacement from your Kawasaki dealer and install it in the correct position.

EMISSION CONTROL INFORMATION

Fuel Information

THIS ENGINE IS CERTIFIED TO OPERATE ON UNLEADED REGULAR GRADE GASOLINE ONLY. A minimum of 87 octane of the antiknock index is recommended. The antiknock index is posted on service station pumps in the U.S.A.

Emission Control Information

To protect the environment in which we all live, Kawasaki has incorporated an exhaust emission control system in compliance with applicable regulations of the United States Environmental Protection Agency and the California Air Resources Board. Also, depending on when your engine was produced, it may have an assigned emissions durability period. *See below for the engine emissions durability period that may apply to your engine.

Exhaust Emission Control System

The exhaust emission control system applied to this engine consists of a carburetor and an ignition system having optimum ignition timing characteristics. The carburetor has been calibrated to provide lean air/fuel mixture characteristics and optimum fuel economy with a suitable air cleaner and exhaust system.

A sealed-type crankcase emission control system is also used to eliminate blow-by gasses. The blow-by gasses are led to a breather chamber through the crankcase and from there to the air cleaner.

Engine Emissions Compliance Period

California

Engines Greater Than or Equal To 225 cc

Model Year – 2008 and later

Durability Period – 1 000 hours

All Other States

Engines Greater Than or Equal To 225 cc

Model Year – 2011 and later

Durability Period – 1 000 hours (Category A)

*** If your engine has an assigned emissions durability period it will be located on the certification label attached to the engine (IMPORTANT ENGINE INFORMATION).**

High Altitude Performance Adjustment Information

To improve the EMISSIONS CONTROL PERFORMANCE of engines operated above 1 000 meters (3 300 feet) , Kawasaki recommends the following Environmental Protection Agency (EPA) and the California Air Resources Board (CARB) approved modifications.

However, the models with DFI (Digital Fuel Injection system) does not require high altitude performance adjustment.

NOTE

○ *When properly performed, these specified modifications only are not considered to be emissions system "tampering" and engine performance is generally unchanged as a result.*

Maintenance and Warranty

Proper maintenance is necessary to ensure that your engine will continue to have low emission levels. This Owners Manual contains those maintenance recommendations for your engine. Those items identified by the Periodic Maintenance Chart are necessary to ensure compliance with the applicable standards.

As the owner of the engine, you have the responsibility to make sure that the recommended maintenance is carried out according to the instructions in this Owners Manual at your own expense.

The Kawasaki Limited Emission Control System Warranty requires that you return your engine to an authorized Kawasaki dealer for remedy under warranty. Please read the warranty carefully, and keep it valid by complying with the owner's obligations it contains.

Tampering with Emission Control System Prohibited

Federal law and California State law prohibit the following acts or the causing thereof: (1) the removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new engine for the purposes of emission control prior to its sale or delivery to the ultimate purchaser or while it is in use, or (2) the use of the engine after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:
Do not tamper with the original emission related parts:

- Carburetor or DFI system, and their internal parts
- Spark Plug
- Magneto or electronic ignition system
- Fuel filter element
- Air cleaner element
- Crankcase
- Cylinder heads
- Breather chamber and internal parts
- Intake pipe and tube
- Muffler or any internal portion of the muffler

FOREWORD

We wish to thank you for purchasing this Kawasaki engine.

Please read this Owner's Manual carefully before starting your new engine so that you will be thoroughly familiar with the proper operation of your engine's control, its features, capabilities and limitations.

Also read the manual of the equipment to which this engine is attached.

To ensure a long, trouble-free life for your engine, give it the proper care and maintenance described in this manual. Always keep this manual at your fingertip so that you can refer to it whenever you need information. This manual should be considered a permanent part of the engine and should remain with the engine when it is sold.

All rights reserved. No part of this publication may be reproduced without our prior written permission.

This publication includes the latest information available at the time of printing. However, there may be minor differences between the actual product and illustrations and text in this manual.

All products are subject to change without prior notice or obligation.

KAWASAKI HEAVY INDUSTRIES, LTD.
Motorcycle & Engine Company

© 2008 Kawasaki Heavy Industries, Ltd.

Dec. 2010 (1) (M)

Please note that the illustrations shown in this manual are made based on Model FH580V as a typical example among other similar models.


TABLE OF CONTENTS

GENERAL INFORMATION	9	Choke Adjustment Associated Choke Type	27
Location of Safety Related Labels.....	9	Separate Choke Type.....	29
Location of Parts	11	Throttle Cable Installation, Adjustment.....	29
Engine Serial Number	14	Choke Cable Installation, Adjustment	29
Tune-up Specifications	15	Engine Speed Adjustment.....	31
Engine Oil Capacity.....	15	MAINTENANCE	32
FUEL AND OIL RECOMMENDATIONS	16	Periodic Maintenance Chart	32
Fuel	16	Oil Level Check	34
Engine Oil.....	17	Oil Change	34
PREPARATION	18	Oil Filter Change	35
Fuel	18	Air Cleaner Service	36
Engine Oil.....	19	Heavy Duty Air Cleaner (Option).....	37
STARTING	20	Air Cleaner Element	37
Starting the Engine.....	20	Cap (Dust Ejector Valve).....	37
Warming Up.....	23	Fuel Filter and Fuel Pump Service	39
OPERATING	25	Spark Plug Service.....	39
Engine Inclination	25	Cooling System Cleaning.....	40
STOPPING	26	STORAGE	42
Stopping the Engine	26	Fuel System Draining	42
Ordinary Stop	26	TROUBLESHOOTING GUIDE	43
Emergency Stop.....	26	ENVIRONMENTAL PROTECTION	45
ADJUSTMENT	27	SPECIFICATIONS	46
Associated choke type	27	WIRING DIAGRAM	47
Throttle Cable Installation, Adjustment.....	27		

GENERAL INFORMATION

Location of Safety Related Labels

[Electric Starter Model]

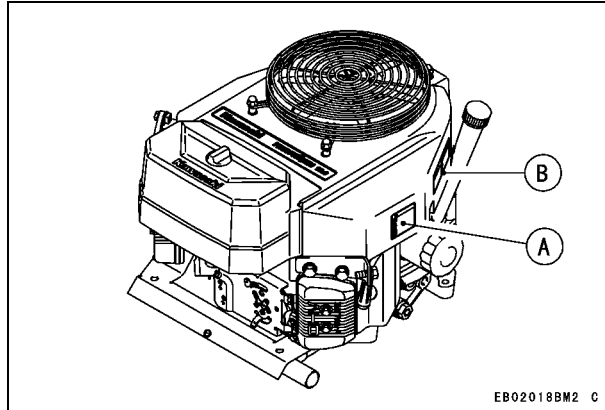

A. Warning Label


B. Engine Maintenance Label



ENGINE MAINTENANCE	CHECK OIL BEFORE STARTING
<ol style="list-style-type: none"> 1. CHECK OIL LEVEL 2. CHECK & CLEAN AIR CLEANER 3. CLEAN FINS & SCREEN 4. CHANGE OIL & OIL FILTER <p>REFER TO OWNER'S MANUAL FOR FURTHER INFORMATION</p>	<p>DO NOT TURN CAP ON THREADS WHEN CHECKING OIL LEVEL.</p> <p>(TIGHTEN CAP WHEN FINISHED CHECKING)</p>

10 GENERAL INFORMATION

[Recoil Starter Model]

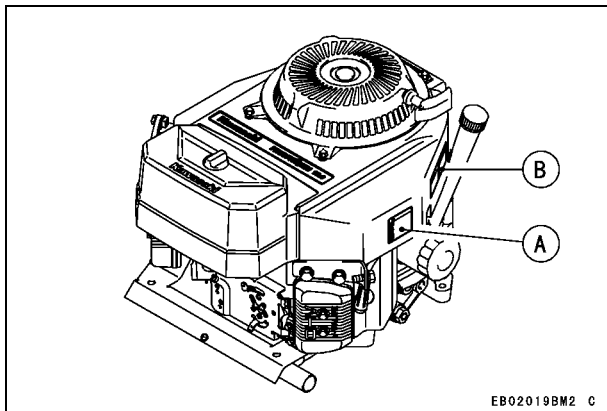

EB02019BM2 C

A. Warning Label


B. Engine Maintenance Label



ENGINE MAINTENANCE

1. CHECK OIL LEVEL
2. CHECK & CLEAN AIR CLEANER
3. CLEAN FINS & SCREEN
4. CHANGE OIL & OIL FILTER

REFER TO OWNER'S MANUAL FOR FURTHER INFORMATION



CHECK OIL BEFORE STARTING

DO NOT TURN CAP ON THREADS WHEN CHECKING OIL LEVEL.

↓ FULL


↑ ADD

(TIGHTEN CAP WHEN FINISHED CHECKING)


EB02001BM4 C

Location of Parts

[Electric Starter Model]

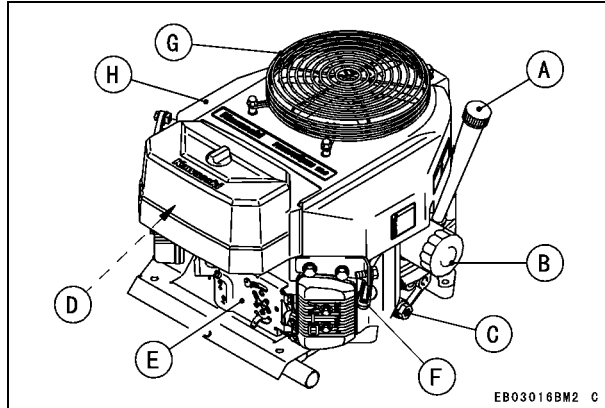



- A. Oil Gauge/Filler
- B. Oil Filter
- C. Oil Drain Plugs
- D. Air Cleaner/Carburetor
- E. Control Panel
- F. Spark Plug Caps/Spark Plugs
- G. Air Inlet Screen Guard
- H. Fan Housing

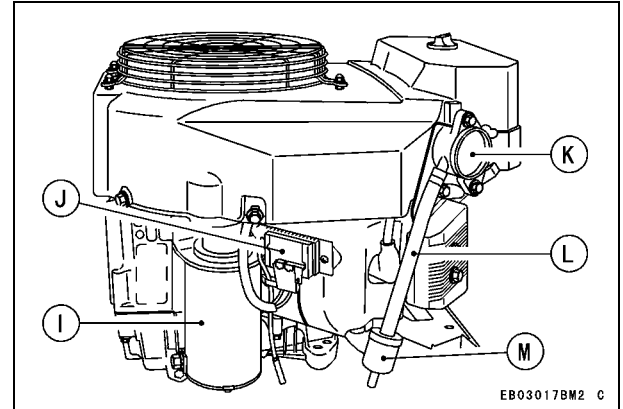

- I. Electric Starter
- J. Voltage Regulator


12 GENERAL INFORMATION

[Recoil Starter Model]

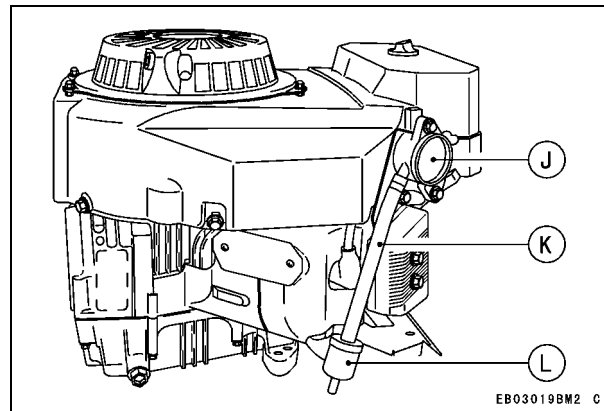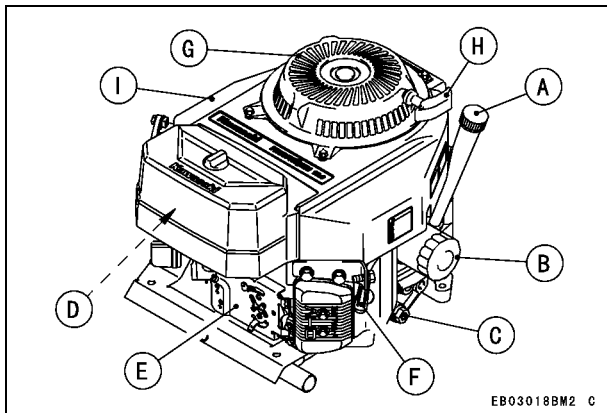


- A. Oil Gauge/Filler
- B. Oil Filter
- C. Oil Drain Plugs
- D. Air Cleaner/Carburetor
- E. Control Panel
- F. Spark Plug Caps/Spark Plugs
- G. Recoil Starter with Screen
- H. Recoil Starter Grip
- I. Fan Housing
- J. Fuel Pump
- K. Fuel Tube
- L. Fuel Filter

[Heavy Duty Air Cleaner Model]

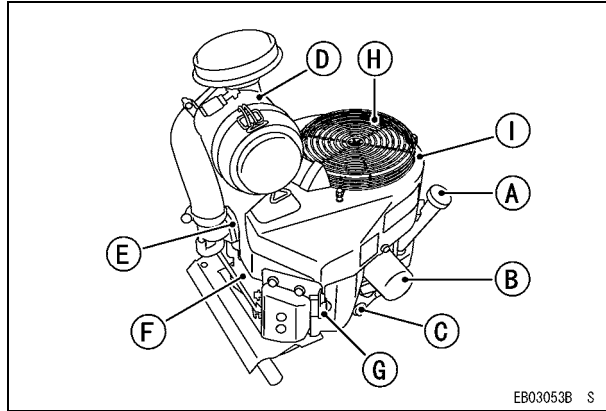

- A. Oil Gauge/Filler
- B. Oil Filter
- C. Oil Drain Plugs
- D. Air Cleaner (Heavy Duty Type)
- E. Carburetor
- F. Control Panel
- G. Spark Plug Caps/Spark Plugs
- H. Air Inlet Screen Guard
- I. Fan Housing

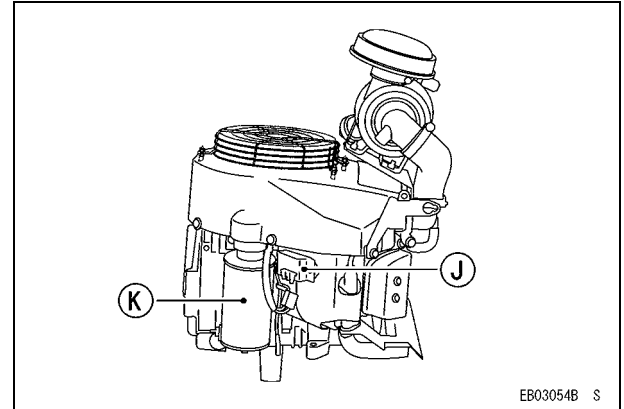

- J. Voltage Regulator
- K. Electric Starter


14 GENERAL INFORMATION

Engine Serial Number

The engine serial number (A) is the only means of identifying your particular engine from others of the same model type.


This engine serial number is needed by your dealer when ordering parts.

[Electric Starter Model]

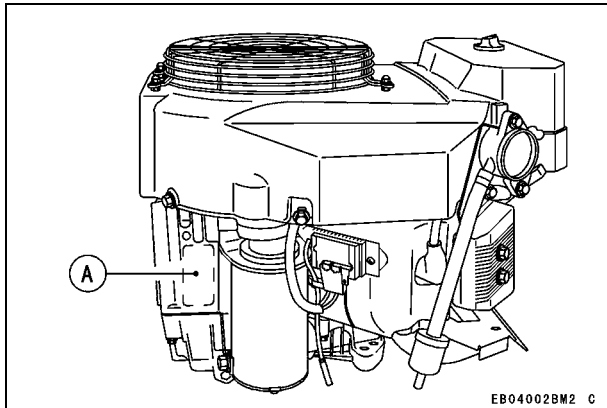

A. Engine Serial Number Label

[Recoil Starter Model]

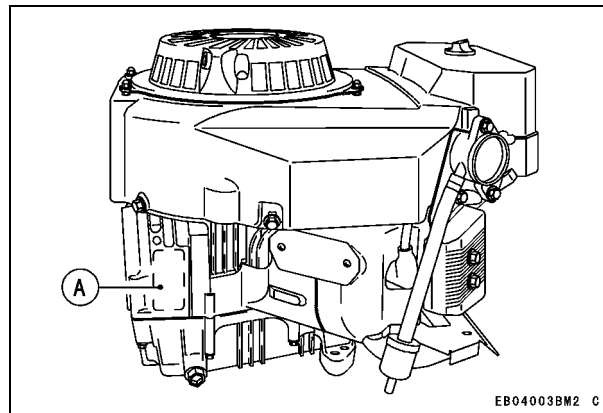

A. Engine Serial Number Label

Tune-up Specifications

ITEM	Specifications
Ignition Timing	Unadjustable
Spark Plugs: Gap	CHAMPION...RCJ8Y 0.75 mm (0.030 in.)
Low Idle Speed	1 550 r/min (rpm)
High Idle Speed	3 600 r/min (rpm)
Valve Clearance	IN 0.10 ~ 0.15 mm (0.004 ~ 0.006 in.) EX 0.10 ~ 0.15 mm (0.004 ~ 0.006 in.)
Other Specifications	No other adjustment needed

NOTE

- *High and low idle speeds may vary depending on the equipment on which the engine is used. Refer to the equipment specification.*

Engine Oil Capacity

FH541V	1.5 L (1.6 US·qt)
FH580V	[when oil filter is not removed]
	1.7 L (1.8 US·qt)
	[when oil filter is removed]

FUEL AND OIL RECOMMENDATIONS

Fuel

Use only clean, fresh, unleaded regular grade gasoline.

CAUTION

Do not mix oil with gasoline.

Octane Rating

The octane rating of a gasoline is a measure of its resistance to “knocking”. Using a minimum of 87 octane by the antiknock index is recommended. The antiknock index is posted on service station pumps in the U.S.A..

Antiknock Index: $(RON + MON)/2$

RON = Research Octane Number

MON = Motor Octane Number

NOTE

○ If “knocking or pinging” occurs, use a different brand of gasoline or higher octane rating.

Oxygenated Fuel

Oxygenates (either ethanol or MTBE) are added to the gasoline. If you use the oxygenated fuel be sure it is unleaded and meets the minimum octane rating requirement.

The following are the EPA approved percentages of fuel oxygenates.

ETHANOL: (Ethyl or Grain Alcohol)

You may use gasoline containing up to 10% ethanol by volume.

MTBE: (Methyl Tertiary Butyl Ether)

You may use gasoline containing up to 15% MTBE by volume.

METHANOL: (Methyl or Wood Alcohol) 5% by volume

You may use gasoline containing up to 5% methanol by volume, as long as it also contains cosolvents and corrosion inhibitors to protect the fuel system. Gasoline containing more than 5% methanol by volume may cause starting and/or performance problems. It may also damage metal, rubber, and plastic parts of your fuel system.


Engine Oil

The following engine oils are recommended.

API Service Classification : SF, SG, SH, or SJ.

Oil Viscosity

Choose the viscosity according to the temperature as follows:

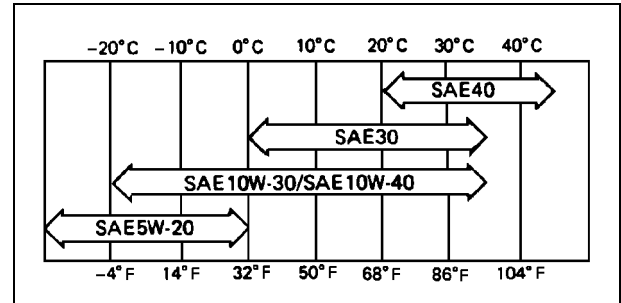

NOTE

- Using multi grade oils (5W-20, 10W-30, and 10W-40) will increase oil consumption. Check oil level more frequently when using them.

PREPARATION

Fuel

 **WARNING**

Gasoline is extremely flammable and can be explosive under certain conditions.

Before refueling, turn the engine switch OFF. Do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks, including any appliances with a pilot light.

Never fill tank so that fuel level rises into the filler neck. If tank is overfilled, heat may cause fuel to expand and overflow through vents in tank cap.

After refueling make sure tank cap is securely closed.

If gasoline is spilled, wipe it up immediately.

- Level the engine before fueling.
- Remove the fuel tank cap.
- Slowly pour fuel into the tank through the fuel strainer.
- Close the tank cap securely.


Engine Oil

Check the engine oil daily before starting the engine otherwise shortage of the engine oil may cause serious damage to the engine such as seizure.

- Place the engine on level surface. Clean area around the oil gauge before removing it.
- Remove the oil gauge (A) and wipe it with a clean cloth.
- Pour the oil slowly to “FULL” mark on the oil gauge.
- Insert the oil gauge into tube (B) WITHOUT SCREWING IT IN.
- Remove the oil gauge (A) to check the oil level. Level should be between “ADD” and “FULL” marks. Do not overfill.
- Install and tighten the oil gauge (A).

Engine Oil Capacity

FH541V	1.5 L (1.6 US·qt)
FH580V	[when oil filter is not removed]
	1.7 L (1.8 US·qt)
	[when oil filter is removed]

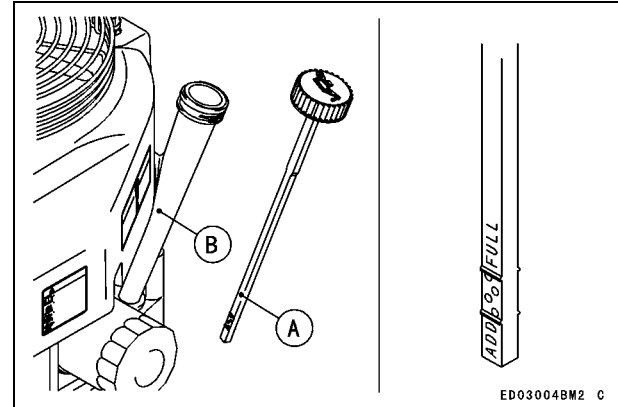

A. Oil Gauge
B. Tube

CAUTION

The engine is shipped without engine oil.

STARTING

Starting the Engine

WARNING

Exhaust gases contain carbon monoxide, a colorless, odorless, poisonous gas. Do not operate the unit in enclosed areas. Provide adequate ventilation at all times.

WARNING

Engine exhaust may ignite combustible materials and cause a fire. Keep the area around the exhaust outlet clear. Locate the unit so that the exhaust outlet points toward an open area and is located at least one meter (3.3 feet) from any obstructions.

NOTE

- *Be aware of following in order to start the engine easily in cold weather.*
- *Use proper oil for expected temperature (See FUEL AND OIL RECOMMENDATIONS chapter).*

- *Use fresh gasoline.*
- *Protect the engine or the equipment from direct exposure to weather when not in operation.*
- *Before starting the engine, disconnect all possible external loads.*
- *Open the fuel valve (A) on the equipment.*
- *Turn the engine switch key to its "ON" or "START" position. For Control Panel Switch Type, move the throttle lever on the equipment to its halfway position. Moving the lever away from its low speed end turns ignition on.*
- *Move the throttle lever to its halfway position between low speed and high speed.*



[Associated choke type]

For A Cold Engine - Place the throttle lever into "CHOKE" position (B).


For A Warm Engine (normal operating temperatures) - Place the throttle lever **halfway** between "SLOW" and "FAST" positions (C).

[Separate choke type]

For A Cold Engine - Place the choke control lever into "CHOKE" position (B).

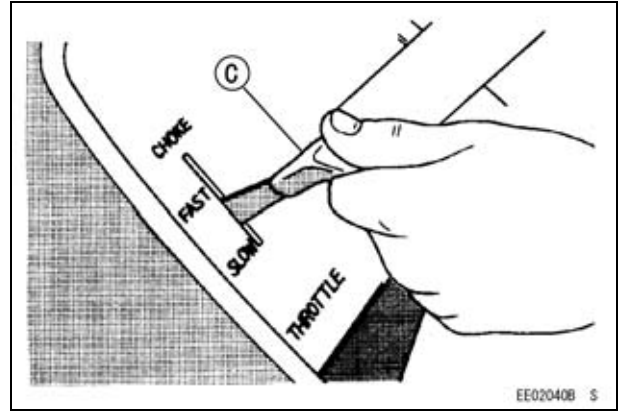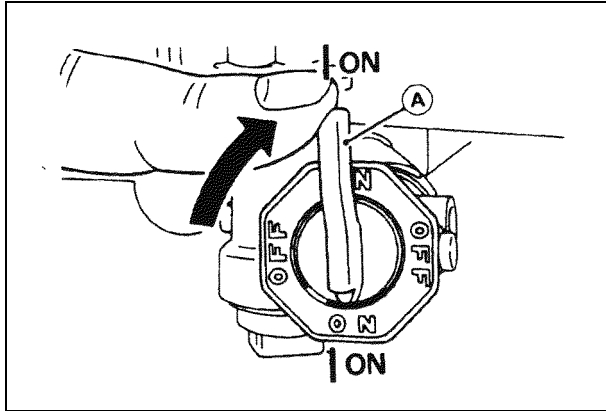

EE02040B S

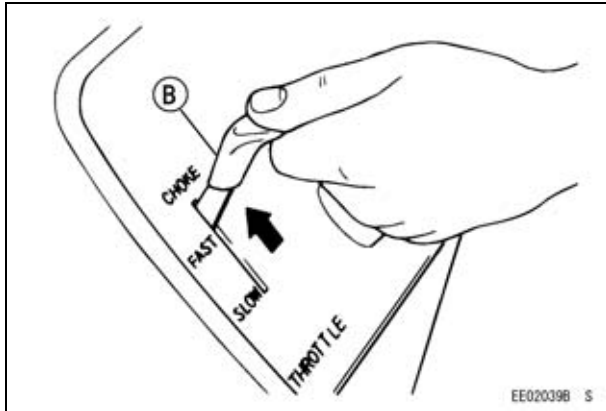


EE02039B S

22 STARTING

[Electric Starter Model]

- Put the switch key (A) into the engine switch.
- Turn the switch key to the START position on the equipment. Normally the engine will start within 3 seconds.

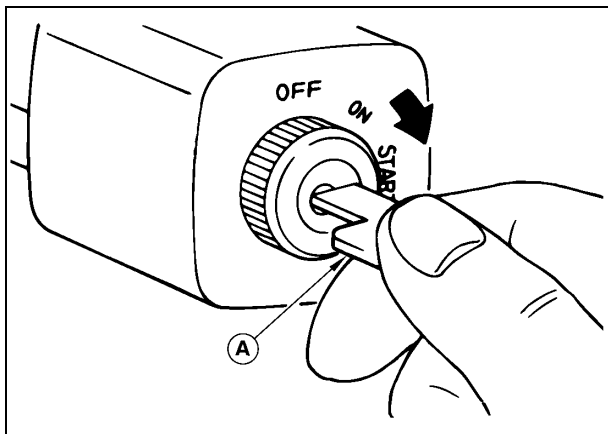

CAUTION

Do not run the electric starter continuously for more than 5 seconds, otherwise the battery may discharge quickly. If the engine does not start right away, wait 15 seconds and try again.

CAUTION

Whenever you start engine, make sure warning light is not illuminated after engine starts. If warning light comes on, stop engine immediately and check oil level (if equipped).

[Recoil Starter Model]


- Pull the recoil starter grip slowly until you feel compression, then pull it briskly.

CAUTION

Do not let recoil cord snap back by itself. This may damage the cord or recoil starter assembly.

NOTE


- If the engine won't start in three pulls, open the choke and try again.

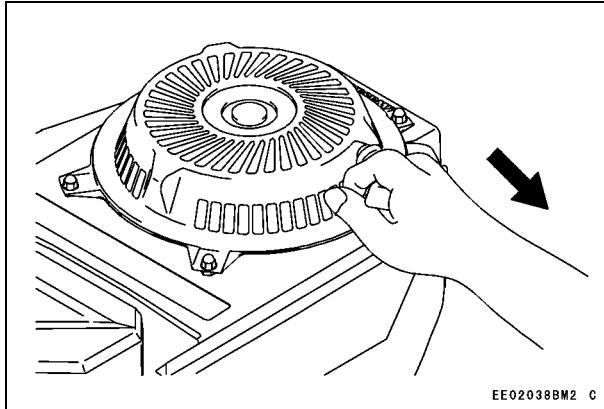

Warming Up

After the engine starts, move the throttle lever (A) on the equipment to halfway between “FAST” and “SLOW”.

To warm up the engine, run it for 3 to 5 minutes with the throttle lever in the same load position (halfway) before putting the equipment under load. Then, move the throttle lever (A) on the equipment to its “FAST” position.

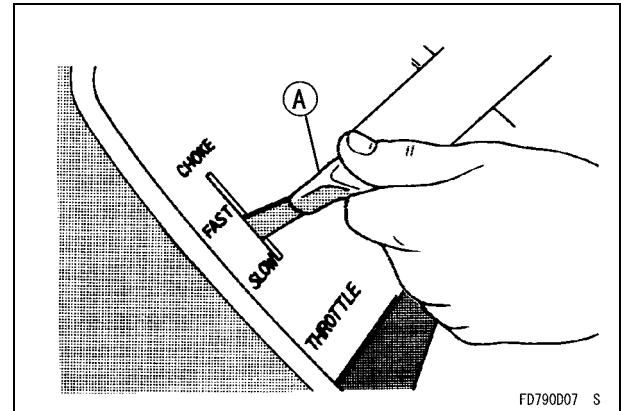

CAUTION

Allow engine to warm up sufficiently (3 to 5 minutes at idle) before applying a load. This will allow oil to reach all engine parts, and allow piston clearance to reach design specifications.

24 STARTING

CAUTION

While warming up the engine, make sure the warning lamp (oil pressure) on dash is not on. The warning lamp must not be illuminated during engine operation (if equipped).

OPERATING

Engine Inclination

This engine will operate continuously at angles up to 25° in any direction.

Refer to the operating instructions of the equipment this engine powers. Because of equipment design or application, there may be more stringent restrictions regarding the angle of operation.

CAUTION

Do not operate this engine continuously at angles exceeding 25° in any direction. Engine damage could result from insufficient lubrication.
--

STOPPING

Stopping the Engine

Ordinary Stop

- Move throttle lever (A) to SLOW position.
- Lower the engine speed to the idle speed. Keep running at the idle speed for about one minute.

CAUTION

Engine damage can occur from run-on or after-burning if engine is stopped suddenly from high speed loaded operation. Reduce engine speed to idle for one minute before shutting engine off.

- Turn the engine switch or the switch key to “OFF” position.


For Control Panel Switch Type, move the throttle lever against its low speed end to turn the ignition off.

Emergency Stop

- Immediately turn the engine switch or the switch key to “OFF” position.

- Close the fuel valve on the equipment.

For Control Panel Switch Type, move the throttle lever on the equipment to its low speed end. Moving the lever to its low speed end turns ignition off.

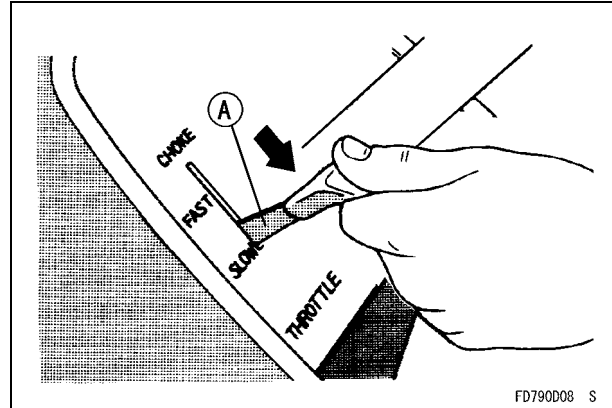

⚠ WARNING

Always remove Engine Key from switch when leaving equipment unattended or when equipment is not in use.

ADJUSTMENT

Two types of choke control are used for FH541V and FH580V Model Engines.

Associated choke type

Throttle Cable Installation, Adjustment

Make sure that the throttle lever on the equipment has been linked to the engine with the throttle cable.

- Leave the cable clamp bolt (A) loose.
- Align the hole (B) in the speed control lever (C) with the hole (D) in the base plate (E) moving the lever (C); insert 6 mm dia. pin (or 6 mm bolt) through two holes.
- Pull up the outer housing (F) of the throttle cable until the inner wire (G) has almost no slack, and tighten the cable clamp bolt (A). Remove the 6 mm dia. pin.


Make sure that the carburetor choke valve (M) is closed completely when the throttle lever on the equipment is moved to “CHOKE” position. If not, perform “CHOKE ADJUSTMENT”.

Choke Adjustment Associated Choke Type

- Stop the engine.
- Align the hole (B) in the speed control lever (C) with the hole (D) in the base plate (E) by moving

the lever (C); insert 6 mm dia. pin (or 6 mm bolt) through two holes.


- Turn the choke setting screw (I) so that the clearance between the screw end and the tongue of the lever (J) is zero. Remove the 6 mm dia. pin or bolt.
- Make sure that the choke valve can move to full open side and full close side by turning the lever.

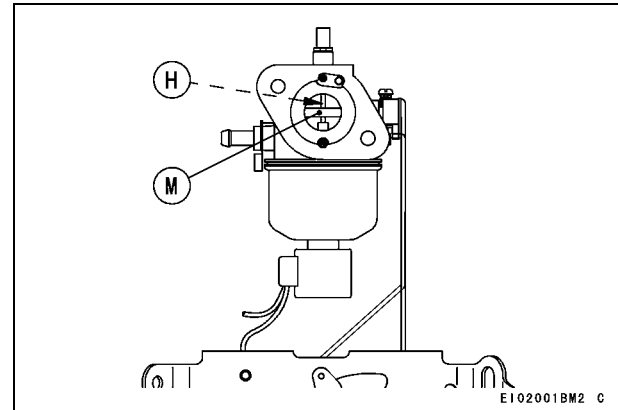

H. Throttle Valve
M. Choke Valve

28 ADJUSTMENT

Associated choke type

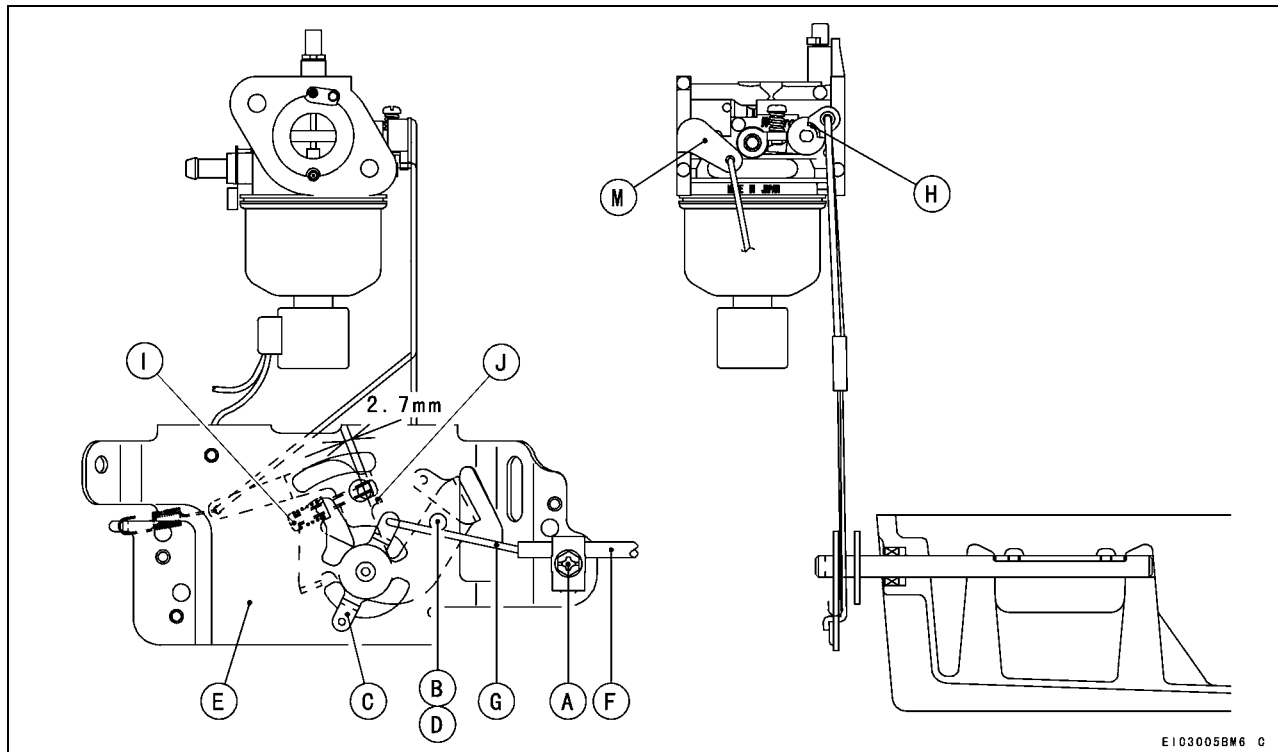

Separate Choke Type


Throttle Cable Installation, Adjustment

- Link the throttle cable (G) to the speed control lever (C) and loosely clamp the throttle cable outer housing (F) with the cable clamp bolt (A).
- Move the throttle lever to “FAST” position.
- Pull up the outer housing (F) of the throttle cable until the inner wire (G) has almost no slack, and tighten the cable clamp bolt (A).
- Move the throttle lever to “slow” position. Make sure that the carburetor throttle valve (H) is moved smoothly.


Choke Cable Installation, Adjustment

- Link the choke cable (K) to the choke control lever (D), and loosely clamp the choke cable outer housing (L) with the cable clamp bolt (B).
- Move the equipment choke control to “OPEN” position. Make sure that the carburetor choke valve (M) is fully opened.
- Pull up the outer housing (L) of the choke cable until the inner wire (K) has almost no slack, and tighten the cable clamp bolt (B).

- Move the equipment choke control to “CHOKE” position. Make sure that the carburetor choke valve (M) is completely closed.
- Make sure that the choke valve turns from fully closed position to fully opened position when actuating the equipment choke control.

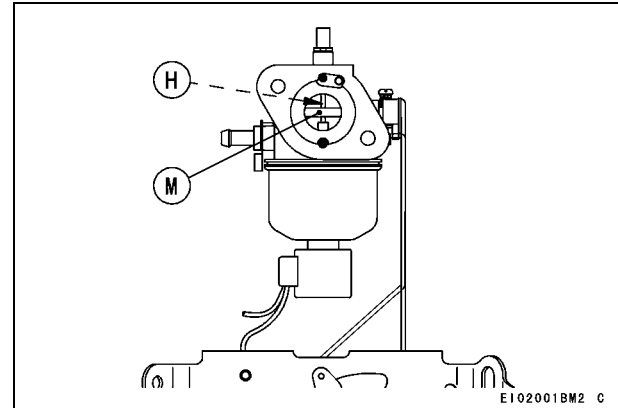

30 ADJUSTMENT

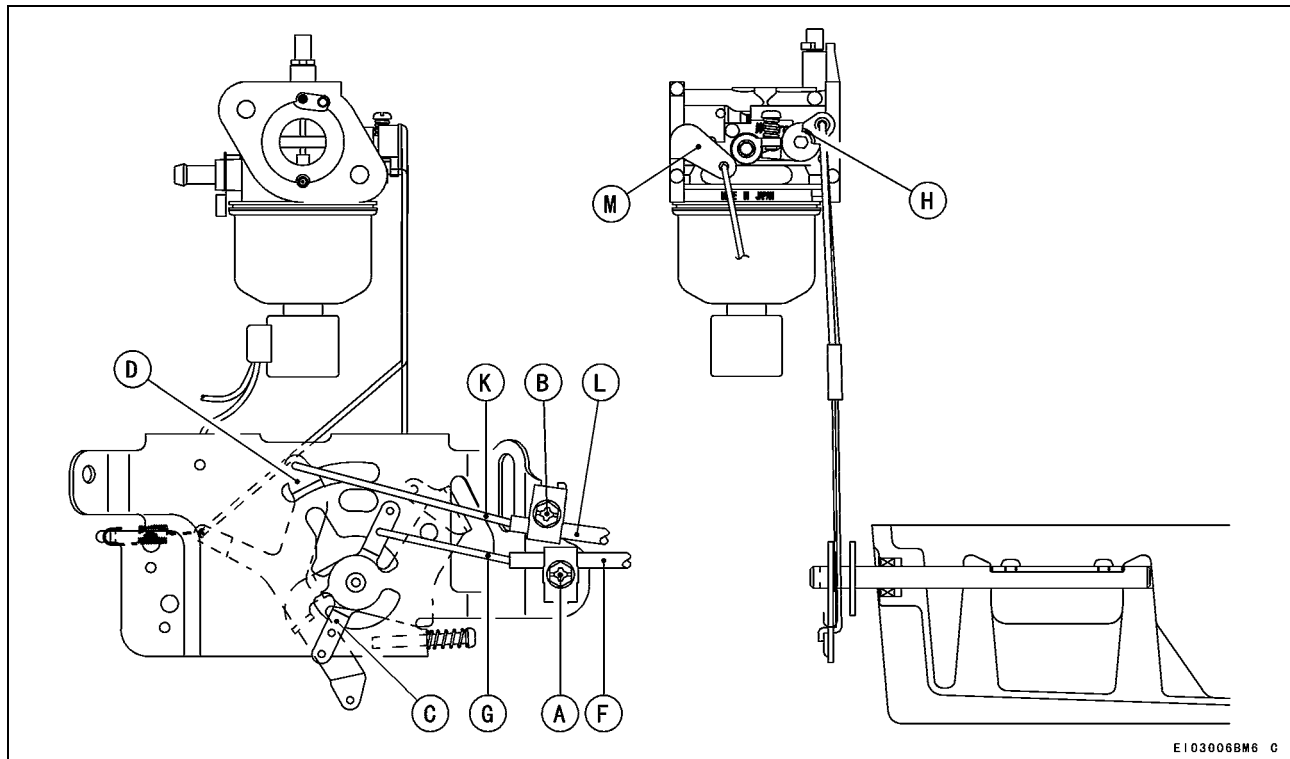

Engine Speed Adjustment

NOTE


- *Do not tamper with the governor setting or the carburetor setting to increase the engine speed. Every carburetor is adjusted at the factory and a cap or a stop plate is installed on each mixture screw.*
- *If adjustment is necessary, see your authorized Kawasaki dealer to perform the adjustment.*

34 MAINTENANCE

Oil Level Check

Check oil level daily and before each time of operation. Be sure oil level is maintained. (See PREPARATION chapter.)

FH541V	1.5 L (1.6 US-qt)
FH580V	[when oil filter is not removed]
	1.7 L (1.8 US-qt)
	[when oil filter is removed]

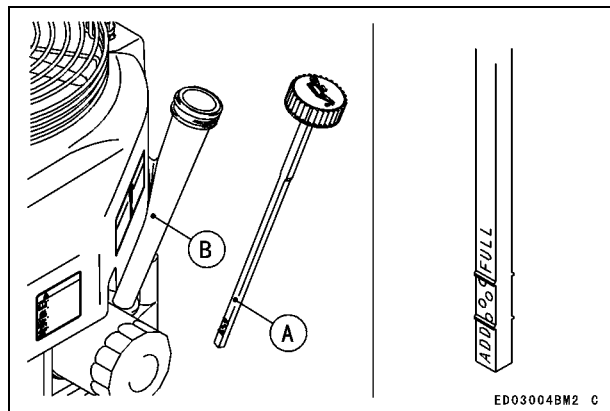


Oil Change

Change oil after first 8 hours of operation. Thereafter change oil every 100 hours.

- Run the engine to warm oil.
- Be sure the engine (equipment) is level.
- Stop the engine.
- Remove the oil drain screw and drain the oil to suitable container while engine is warm.

⚠ WARNING

Hot engine oil can cause severe burns. Allow engine temperature to drop from hot to warm level before draining and handling oil.

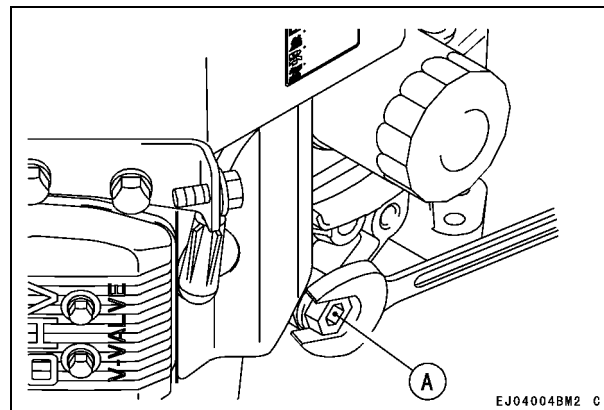

A. Oil Drain Screw

- Install the oil drain plug.
- Remove oil gauge and refill with new oil (See FUEL AND OIL RECOMMENDATIONS chapter).
- Check the oil level (see PREPARATION chapter for oil level check).

⚠ WARNING

Engine oil is a toxic substance. Dispose of used oil properly. Contact your local authorities for approved disposal methods or possible recycling.

Oil Filter Change

- Change the oil filter every 200 hours of operation.

⚠ WARNING


Hot engine oil can cause severe burns. Allow engine temperature to drop from hot to warm level before attempting to remove oil filter.

- Drain engine oil to suitable container.

CAUTION

Before removing the oil filter, place suitable pan under filter connection.

- Rotate the oil filter (A) counterclockwise to remove it.
- Coat a film of clean engine oil on seal of new filter.
- Install new filter rotating it clockwise until seal contacts mounting surface (B). Then rotate filter 3/4 turn more by hand.
- Supply engine oil as specified.
- Run the engine for about 3 minutes, stop engine, and check oil leakage around the filter.
- Add oil to compensate oil level down due to oil filter capacity (see PREPARATION chapter for oil level check).

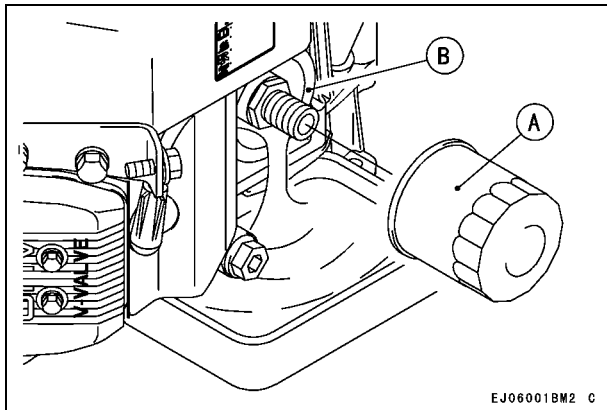

⚠ WARNING

Engine oil is a toxic substance. Dispose of used oil properly. Contact your local authorities for approved disposal methods or possible recycling.

Air Cleaner Service

CAUTION


Do not run the engine with the air cleaner removed.

- Remove the air cleaner case A) from the air cleaner body (C) by loosening the nut (B).

Foam Element

Clean the foam element (D) every 25 hours.

- Wash the element in detergent and water, and dry it thoroughly.

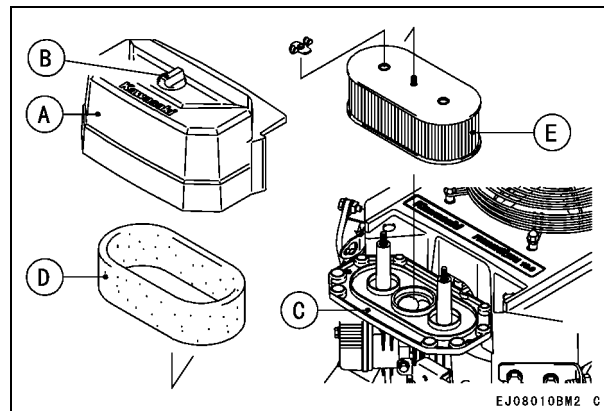

Paper Element

Clean the paper element (E) every 50 hours.

- Clean the element by tapping gently to remove dust. If very dirty, replace the element with a new one.
- Replace with a new paper element yearly or 200 hours whichever comes first.

NOTE

- *Operating in a dusty condition may require more frequent maintenance than above.*

CAUTION
<p>Do not wash paper element. Do not oil paper or foam element. Do not use pressurized air to clean paper element.</p>

Heavy Duty Air Cleaner (Option)

This air cleaner element is not recommended to be cleaned. Replace the air cleaner element with a new one at the maintenance time as shown in the maintenance chart.

CAUTION
<p>To prevent excessive engine wear, do not run the engine with the air cleaner removed.</p>

CAUTION
<p>Do not wash air cleaner element. Do not oil air cleaner element. Do not use pressurized air to clean air cleaner element.</p>

NOTE

- *Operating in dusty condition may require more frequent maintenance.*

Air Cleaner Element


Replace the air cleaner element every 250 hrs.

Cap (Dust Ejector Valve)


Push and open the cap on the case of the air cleaner body to expel dust and/or water accumulated inside.

- Unfasten the two retaining clamps (A) and remove the case (B) from the air cleaner body (C).
- Remove the air cleaner element (D) from the air cleaner body by pulling out them.

38 MAINTENANCE

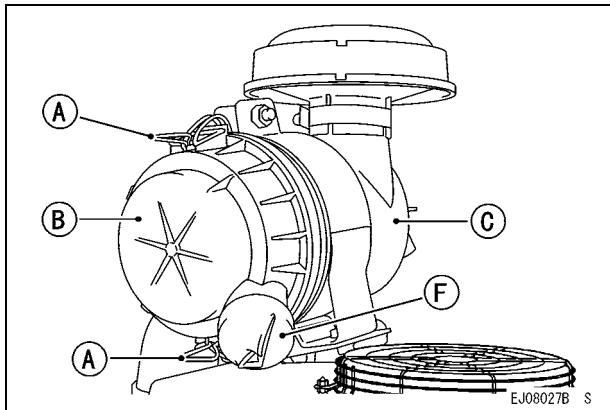

- A. Retaining Clamps**
- B. Case**
- C. Air Cleaner Body**
- F. Cap (Dust Ejector Valve)**

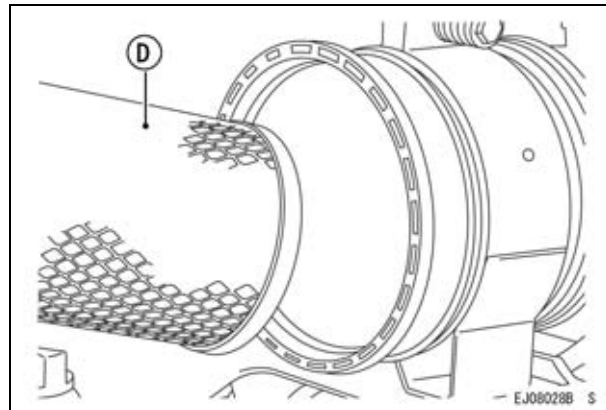

D. Air Cleaner Element

- Install the new air cleaner elements into the air cleaner body.
- Reinstall the case and the cap (F) then securely fasten the two retaining clamps.

Fuel Filter and Fuel Pump Service

⚠ WARNING

Improper use of solvents can result in fire or an explosion.

Do not use gasoline or low flash-point solvents to clean the fuel filter and/or the fuel pump.

Clean only in a well ventilated area away from sources of sparks or flame, including any appliances with a pilot light.

- The fuel filter can not be disassembled. If the fuel filter gets clogged, replace it with a new one.
- The fuel pump can not be disassembled. If the fuel pump fails, replace it with a new one.

Spark Plug Service

⚠ WARNING

Hot engine components can cause severe burns.

Stop engine and allow it to cool before checking spark plugs.


Clean or replace the spark plugs and reset gap (A) every 100 hours of operation.

- Disconnect the spark plug caps from spark plugs and remove the spark plugs.
- Clean the electrodes (B) by scraping or with a wire brush to remove carbon deposits.
- Inspect for cracked porcelain or other wear and damage. Replace the spark plug with a new one if necessary.
- Check the spark plug gap and reset it if necessary. The gap must be 0.75 mm (0.030 in.). To change the gap, bend only the side-electrode, using a spark plug tool.
- Install and tighten the spark plugs to 22 N·m (2.2 kgf·m, 16 ft·lb).
- Fit the spark plug caps on the spark plugs securely.
- Pull up the spark plug caps lightly to make sure of the installation of the spark plug caps.

RECOMMENDED SPARK PLUG

CHAMPION RCJ8Y

40 MAINTENANCE

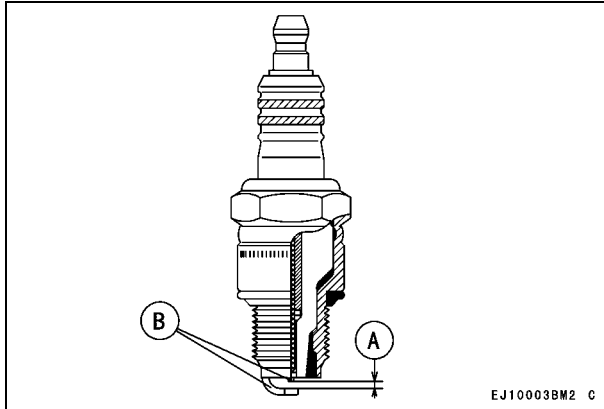

- A. Spark Plug Gap
- B. Electrodes

Cooling System Cleaning

Before each use, check that the guard (A) and the air inlet (rotary) screen (B) are free from grass or debris and clean if necessary. Every 100 hours of operation, check and clean the cooling fins and inside of engine shrouds to remove grass, chaff or dirt clogging the cooling system and causing overheating. When cleaning, remove the guard (A), the air inlet screen (B) for Electric Starter Model or recoil starter (I) for Recoil Starter Model, and the fan housing (F) loosening the nuts (C), the bolts (D), the spacer (E) and the bolts (G), (H).


CAUTION

Do not run engine before all cooling system parts are reinstalled to keep cooling and carburetion as intended.


[Bolts and Nut Size, Tightening torque]

Bolts and Nut	Size	Length	Tightening-torque
C	M6		5.9 N·m (0.60 kgf·m, 52 in·lb)
D	M6	12 mm	5.9 N·m (0.60 kgf·m, 52 in·lb)
G	M6	16 mm	5.9 N·m (0.60 kgf·m, 52 in·lb)
H	M6	22 mm	5.9 N·m (0.60 kgf·m, 52 in·lb)

[Electric Starter Model]

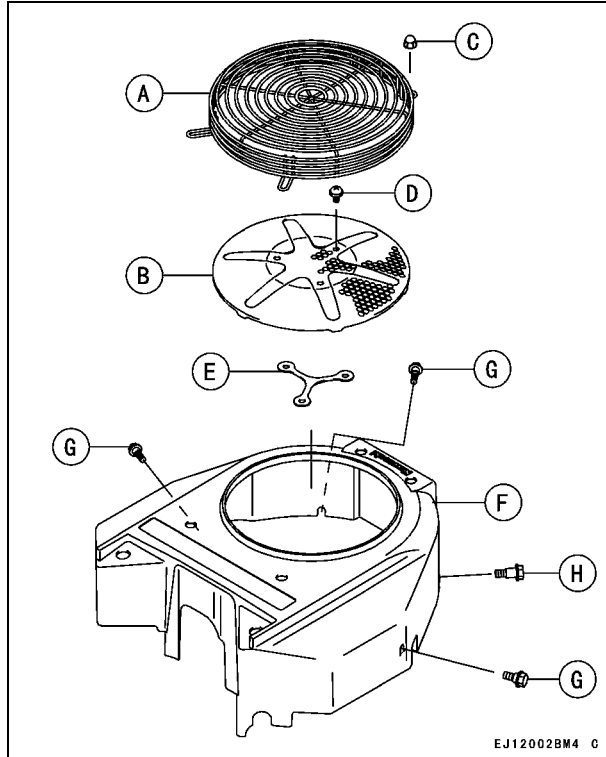

[Recoil Starter Model]

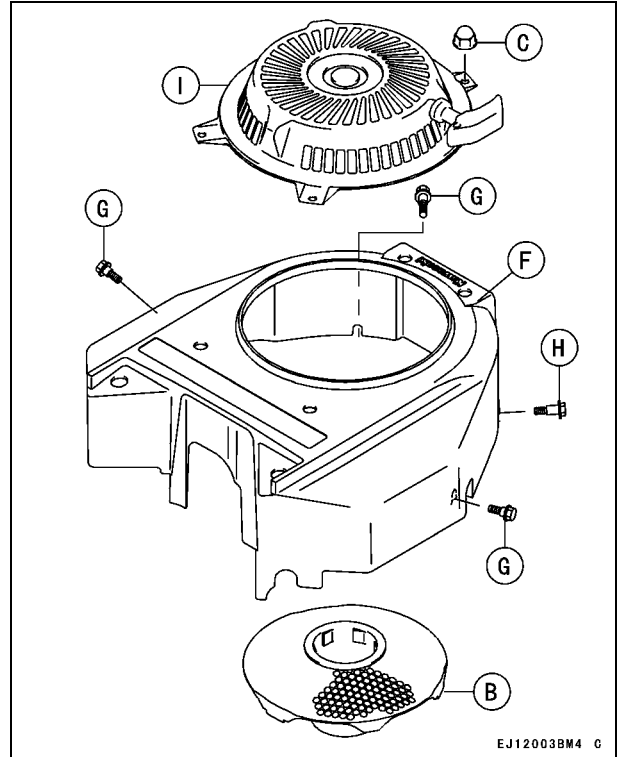

STORAGE

Fuel System Draining

Engines to be stored over 30 days should be completely drained of fuel to prevent gum deposits forming on essential carburetor parts, fuel filter and tank.

⚠ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions.

Drain fuel before storing the unit for extended periods.


Drain fuel in a well ventilated area away from any source of flame or sparks, including any appliances with a pilot light. Store fuel in an approved container in safe location.

- Clean the every part of the engine.
- Be sure that the engine switch or key switch is positioned at "OFF".
- Close the fuel valve and remove the sediment bowl.
- Put a pan under the fuel valve to receive the drained fuel, and open the fuel valve to drain the fuel from fuel tank completely.
- Install the sediment bowl.
- To remove the fuel from the carburetor, run the engine to use up the fuel in the carburetor.

⚠ WARNING

Gasoline is a toxic substance. Dispose of gasoline properly. Contact your local authorities for approved disposal methods.

- Remove the spark plugs and pour approx 1 ~ 2 mL (0.06 ~ 0.1 cu. in.) of engine oil through the spark plug hole (A). Turn the switch key to the "START" position for a few seconds. This blocks the air inside the cylinder and prevents rust inside the engine.

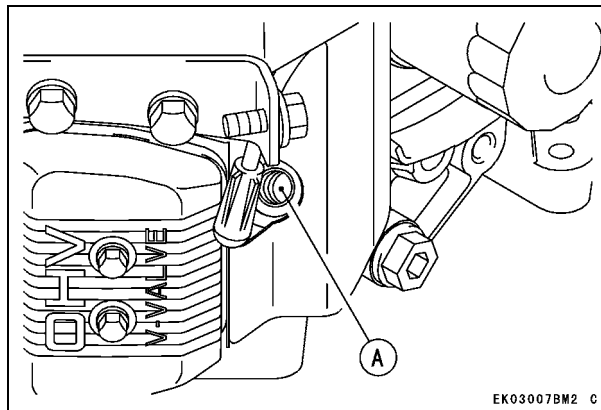

- Change engine oil for next use after period of storage (see MAINTENANCE chapter for oil change.)

TROUBLESHOOTING GUIDE

If the engine malfunctions, carefully examine the symptoms and the operating conditions, and use the table below as a guide to troubleshooting.

Symptom		Probably Cause	Remedy
Engine won't start or output is low	Insufficient compression	Faulty piston, cylinder, piston ring, and head gasket	K
		Faulty valves	
		Loose spark plug	Tighten properly
		Loose cylinder head bolts	
	No fuel to combustion chamber	No fuel in fuel tank	Fill fuel tank
		Fuel filter not in "ON" position	Open fuel valve lever.
		Blocked fuel filter or tube	Clean
		Blocked air vent in fuel tank cap	
		Faulty carburetor	K
	Spark plug fouled by fuel	Over-rich fuel/air mixture	Open choke valve of carburetor. Rotate engine with spark plug removed to discharge excess fuel. Clean spark plug.
		Clogged air cleaner	Clean
		Faulty carburetor	K

44 TROUBLESHOOTING GUIDE

Symptom		Probably Cause	Remedy
		Incorrect grade/type of fuel	Change gasoline
		Water in fuel	
	No spark or weak spark	Faulty spark plug	Replace spark plug
		Faulty ignition coil igniter	K
		Engine switch left in "OFF" position	Turn engine switch to "ON" position (see M)
Low output	Engine overheats	Clogged air cleaner	Clean
		Cooling air path clogged with dirt	
	Engine overheats	Insufficient engine oil	Replenish or change oil
		Carbon build-up on combustion chamber	K
		Poor ventilation around engine.	Select a better location
	Engine speed won't increase	Faulty governor	K

K : Service to be performed by an authorized Kawasaki dealer.

M : For Control Panel Switch Type, move the throttle lever on the equipment away from its low speed end to turn the engine switch to "ON".

ENVIRONMENTAL PROTECTION

To protect our environment, properly discard used batteries, engine oil, gasoline, coolant, or other components that you might dispose of in the future.

Consult you authorized Kawasaki dealer or local environmental waste agency for their proper disposal procedure.

SPECIFICATIONS


	FH541V, FH580V	
Type	Air-cooled, 4-stroke Vertical OHV, gasoline engine	
Bore × Stroke	74 × 68 mm (2.91 × 2.68 in.)	
Displacement	585 mL (35.6 cu.in.)	
Ignition System	Flywheel magneto transistor type	
Direction of Rotation	Counterclockwise facing the PTO Shaft	
Starting System	Electric starter	Recoil starter
Dry Weight	33.1 kg (73.0 lbs)	31.4 kg (69.2 lbs)

NOTE

- *Specifications are subject to change without notice.*
- *Dry weight excludes that of fuel tank and muffler.*

WIRING DIAGRAM

[Electric Starter Model]

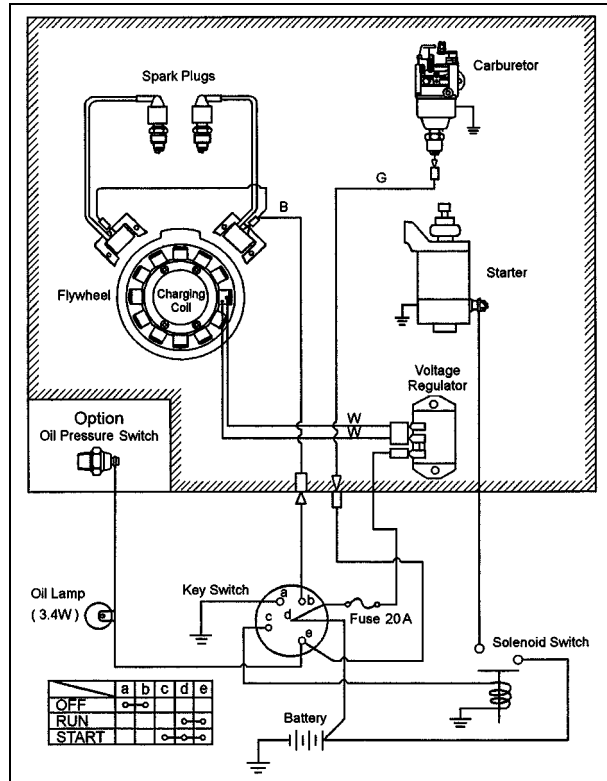

NOTE

○ Portion Surrounded by hatching Shows Kawasaki Procurement Parts.

WARNING



For electrical safety, always remove cable from negative (-) side of battery before attempting any repair or maintenance.

Battery Capacity Recommended

Model	FH541V, FH580V
Lawn Mower	12 V 200 CCA Class
Snow Thrower	12 V 280 CCA Class

48 WIRING DIAGRAM

(Recoil Starter Model)

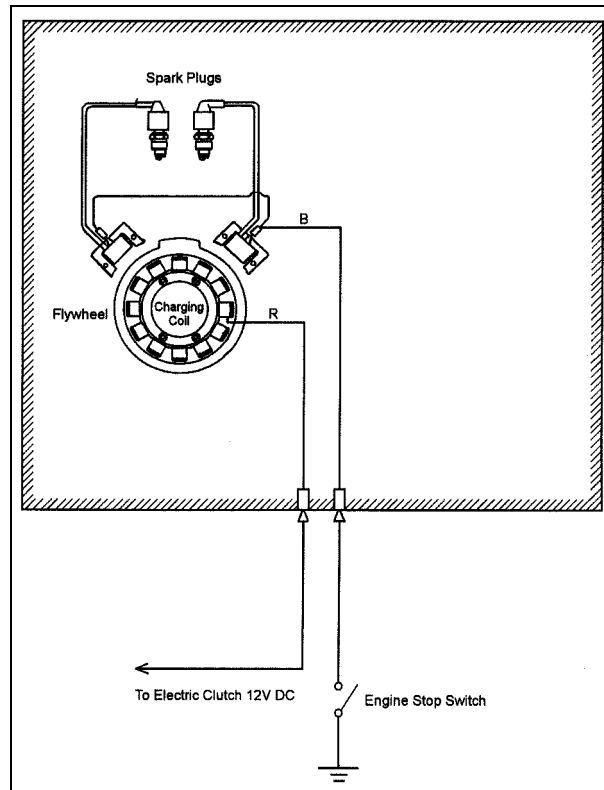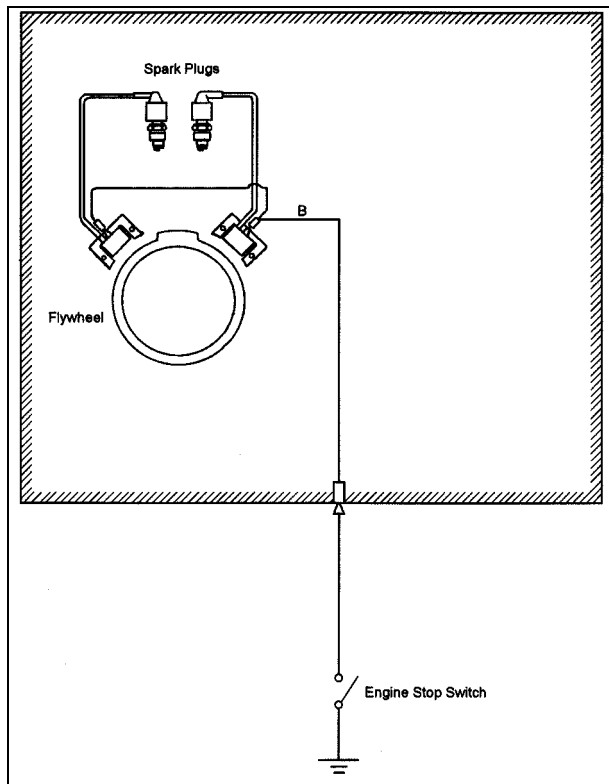

NOTE

○ Portion Surrounded by hatching Shows Kawasaki Procurement Parts.